



COOKE

CONTEMPORARY FURNITURE

888-303-2453 | info@cookefurniture.com

Glass Wind Guard Instructions

 <p>DANGER</p> <p>HOT SURFACE DO NOT TOUCH</p> 	<p>HOT GLASS WILL CAUSE BURNS</p> <p>DO NOT TOUCH GLASS UNTIL COOLED</p> <p>NEVER ALLOW CHILDREN TO TOUCH GLASS</p>	<ul style="list-style-type: none">• Keep children away.• CAREFULLY SUPERVISE children near fire pit.• Alert children and adults to hazards of high temperatures.• High Temperatures may ignite clothing or other flammable materials.• Clothing, furniture and other flammable materials must not be placed on or near the glass guard.• Do not leave appliance unattended while burning.
---	--	---

What Is Needed

- Phillips Screwdriver (Hand tools **ONLY**, do NOT use power tools for assembly)
- Soft leather gloves for handling glass panels
- Soft non-abrasive surface for assembly
- Two people are recommended for assembly



Care and Operating Instructions

- Clean glass with water, white vinegar, or commercially available streak-free glass cleaner and a soft cloth.
- Never place your wind guard directly on the fire pit insert.
- Periodically check the set screws to ensure tight.
- Always check the glass panels for cracks. DO NOT use glass panels with a crack.
- Make sure the glass has a minimum clearance of 1" around fire pit opening.
- Do not use in high wind conditions
- Never attempt to clean glass while hot.
- DO NOT touch glass while in operation or for 10 minutes following use. It will be hot!
- For a permanent installation, outdoor-rated silicone adhesive can be used to affix Glass Guard to a fire pit surface.
- Avoid thermal shock breakage, rapid temperature change may cause glass to break
- Not to be used on fire pits with flames exceeding 6" above top of glass

COOKE Glass Guards Limited Warranty

COOKE Furniture extends the following warranty for COOKE glass guards used in the United States of America. Dealers and employees of COOKE Furniture have no authority to make any warranty or authorize any remedies in addition to or inconsistent with the terms of this

warranty. This warranty gives you specific legal rights. You may also have other rights that vary from state to state.

COOKE Furniture warrants that this COOKE glass windscreen (the "Product") will be free from defects in material and workmanship for a period of 90 days from its date of purchase. This warranty is subject to the conditions, exclusions and limitations described below.


This warranty applies only to the original owner of the Product and is non-transferable. The COOKE Furniture obligation under this warranty does not extend to damages resulting from (1) assembly, operation or maintenance of the Product not in accordance with the Installation/Assembly Instructions, Operating Instructions; (2) Installation or use which does not comply with local building codes and ordinances; (3) shipping, improper handling, improper operation, abuse, misuse, accident or unworkmanlike repairs; (4) use of fuels other than natural gas or propane; (5) Installation or use of components not supplied with the Product or any other components not expressly authorized and approved in writing by COOKE Furniture; and/or (6) modification of the Product not expressly authorized and approved in writing by COOKE Furniture. Any of the circumstances described in the previous sentence voids this warranty. This warranty is void if the Product or any component has been removed, repaired, or replaced before COOKE Furniture has been afforded a reasonable opportunity to inspect the Product.

 
This warranty is limited to the replacement or repair of defective components or workmanship and COOKE Furniture may fully discharge its obligations under this warranty by repairing or replacing, at its discretion, the defective components. COOKE Furniture will provide replacement parts at no charge and will pay reasonable and necessary labor and freight costs related to replacing or repairing defective components under this warranty. The maximum amount recoverable under this warranty is limited to the purchase price of the Product and, if COOKE Furniture is unable to provide replacement or repair in an expedient and cost-effective manner, COOKE Furniture may discharge all obligations under this warranty by refunding the purchase price of the Product.

To obtain service under this warranty, you must:


1. Send written notice of the claimed condition to: info@cookefurniture.com
2. Affirm that you are the original owner of the Product.
3. Provide COOKE Furniture reasonable opportunity to investigate the claim, including reasonable opportunity to inspect the Product prior to any repair or replacement work and before the Product or any component of the Product has been removed.

Installation Instructions for Round Glass Guards (4 panels)


 <p>DANGER HOT SURFACE DO NOT TOUCH</p>	<p>HOT GLASS WILL CAUSE BURNS</p> <p>DO NOT TOUCH GLASS UNTIL COOLED</p> <p>NEVER ALLOW CHILDREN TO TOUCH GLASS</p>	<p>WARNING: Always perform assembly on a soft, non-abrasive surface. Two people are recommended for assembly and installation!</p> <p>HINT: For rectangular, square and round burners it is recommended to assemble guard upside down and flip over after it is fully assembled.</p>
---	--	--

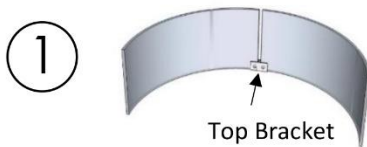

 - Loosen set-screws in **TOP BRACKET** and slide two curved glass panels into it.
- Ensure **small silicone pad is in place on tip of set screws**. Never secure screws with only the metal screw directly against the glass. Overtightening may break glass!
- Tighten set screw until snug. Do not tighten all the way until all four brackets are on.

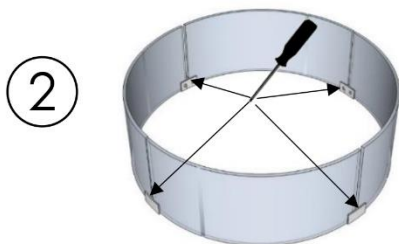

 - Continue to install glass panels one at a time in the same procedure as step one until all four are in place.
- Once all four glass panels and top brackets are in place, finish securely tightening all 8 of the set screws holding the glass together.

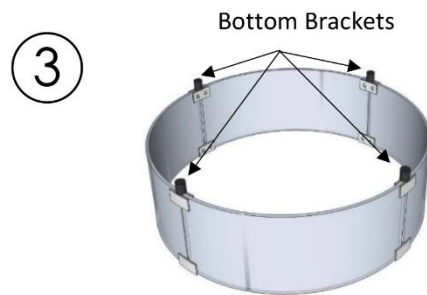



- Continue by installing the **BOTTOM BRACKETS** to the assembly and tightening the set screws in the same manner as the top brackets in previous steps.
- Remember to not overtighten screws and be sure silicone pad is adhered to set screw.




- Carefully, using two people, flip fully assembled glass guard over and place on fire pit centered around burner.

Installation Instructions for Square and Linear Glass Guards


	<p>HOT GLASS WILL CAUSE BURNS DO NOT TOUCH GLASS UNTIL COOLED NEVER ALLOW CHILDREN TO TOUCH GLASS</p>	<p>WARNING: Always perform assembly on a soft, non-abrasive surface. Two people are recommended for assembly and installation!</p> <p>HINT: For rectangular, square and round burners it is recommended to assemble guard upside down and flip over after it is fully assembled.</p>
<p>HOT SURFACE DO NOT TOUCH</p> 		

 1

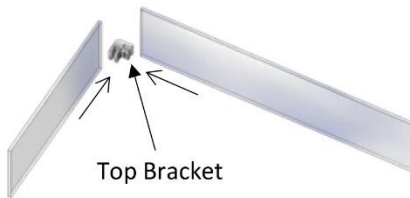

- Loosen set-screws in **TOP BRACKET** and slide a short and long piece of glass into it. (for square glass kits, all panels will be equally sized)

 2

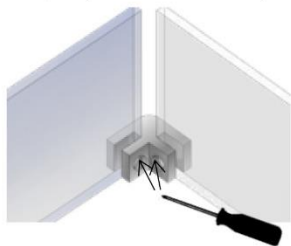


- Make sure the top edge of the glass is flush with the bracket.
- Ensure small silicone pad is in place on tip of set screws, never secure with metal screw directly to the glass. Over-tightening may break glass!
- Tighten set-screws until snug.

3




- Repeat steps 1 and 2 for remaining three corners.

 4

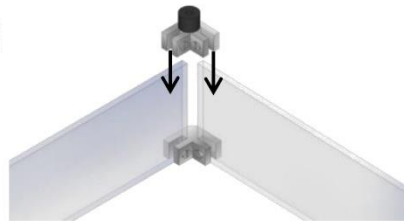

- Loosen set-screws and place **BOTTOM BRACKET** onto glass. The rubber standoff should position glass flush with bracket edge. Secure all screws, making sure to not over-tighten.
- Secure remaining three bottom brackets using the same procedure.

 5

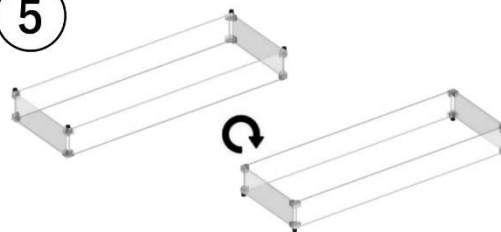

- Carefully, using two people, flip the assembly over. Gently set the glass guard onto fire pit.